

# Colonial/Windsor Bridge Manual

**Parts Included:**

Cedar Rail Posts- 6  
Cedar Side Rail sections- 4  
Cedar Pathway- 1  
Bolts- 12

**Tools Needed:**

Phillips Screwdriver

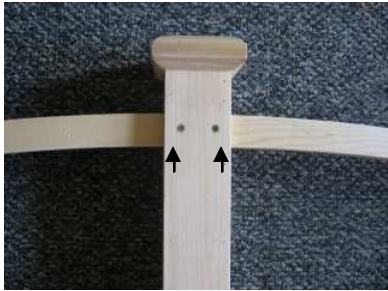


Fig. 1

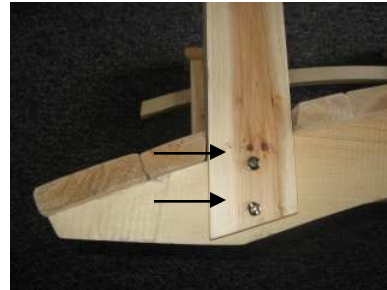


Fig. 2



Finished Bridge

1. First, set up the handrails. The handrails themselves should fit directly into the 2 corner and 1 middle post. Insert screws on the inside of the rails as shown in Fig. 1
2. Align the rails with the pathway.
3. Use the bolts and nuts included to secure the handrails as indicated by the arrows above. In Fig. 2
4. It is recommended to apply a sealant like Thompson's Water Sealant used on decks.

**Master Garden Products**

3223 C. St NE, Suite #1  
Auburn, WA 98002

